

## MULTI FUNCTION 30



<b>Colour:</b>	Stainless Steel
<b>Model:</b>	IM30SEI
<b>Dimensions:</b>	305mm(H) x 525mm(W) x 478mm(D)
<b>Oven cavity Dimensions:</b>	219mm x (M) x 350mm (W) x 384mm(D)
<b>Net weight:</b>	22 kg
<b>Oven capacity:</b>	30 litres
<b>Cooking uniformity:</b>	Turntable system – 314mm dia.
<b>Cooking modes:</b>	Microwave Grill Convection Microwave + Grill Microwave + Convection Defrost Multi stage cooking
<b>Total wattage:</b>	2800W
<b>Power requirements:</b>	240V 10amps
<b>Electrical connection:</b>	The appliance is supplied with a 100cm long flexible earthed supply lead with three pin plug

## MULTI FUNCTION 30

Description	Nominal Data
Microwave power consumption	1400W
Convection power consumption	1400W
Heater power consumption	1200W
Rated Microwave power output	900W
Operational frequency	2450MHz

Control Panel data	Function description
<b>Display screen:</b>	Cooking time, power, indicators and present time are displayed
<b>Micro:</b>	Press a number of times to select microwave power level
<b>Grill:</b>	Press to set a grill cooking program
<b>Convection:</b>	Press to program convection temperature
<b>Micro + Grill:</b>	Press to select different combination cooking settings
<b>Micro + Convection:</b>	Press to select different combination cooking settings
<b>Time Menu (Dial):</b>	Rotate to set cooking time or select auto menu
<b>Start / Quick start:</b>	Press to start cooking program or set quick start cooking program
<b>Weight Adjust:</b>	Press to select the amount of food or enter cooking time setting state
<b>Electronic clock / Timer:</b>	Press to set the clock or timer
<b>Stop / Reset:</b>	Touch to stop cooking program or clear all previous settings before cooking starts