

CARE & MAINTENANCE GAS COOKTOP

Your IAG gas cook-top is manufactured to the highest European standards and is finished in either stainless steel or white enamel. These appliances are attractive and easy to clean, and will remain so if you take a few precautions and follow the steps below,

- Before using your gas cook-top, check each time that the base of the saucepan and the cooking zone are clean and dry.
- Avoid using oversized pans that may radiate excessive heat and cause damage to surrounding surfaces.
- If gas burns with a yellow flame, do not continue using, but turn cook-top off and arrange for a service.
- To save on energy consumption, always use pans with lids. When the boiling point is reached, it is best to turn the knob to the LOW position.
- Do not allow vinegar, coffee, milk, salted water, lemon or tomato juice to remain in contact with the enamelled surface of your cook-top for long periods of time.

CLEANING HINTS

To keep your gas cook-top in good condition, always allow it to cool down before attempting to clean.

Enamelled Surface

All the enamelled parts must be washed only with a sponge and soapy water, or by using a specific non-abrasive product. Dry the parts thoroughly after cleaning.

Stainless steel surface

The stainless steel surfaces are to be cleaned only with a damp cloth and with a purpose made product, such as Steel Power from Hillmark. After removal of all grime, dry with a clean chamois cloth. To maintain a clean finger print less surface use a proprietary product such as Steel Kleen from Hillmark, or a few drops of olive oil on a damp cloth.

Burners

Periodically wash the pan trivets, the burner caps and the burner heads with lukewarm soapy water. After cleaning they must be dried thoroughly and put back correctly in their seats.

- Check that burner head slots are not clogged with foreign matter,
- Check that burner cap is correctly positioned on the burner head.
- Check that the electrode for electric ignition is always clean.

Do not force the burner control knobs if they are difficult to open or close. Contact Customer Service for technical advice and repairs.